

Wolverine Brand™ Vent Filters

Installation Instructions For The *Inline Wolverine*

DISCLAIMER

Please read these instructions **IN THEIR ENTIRETY** before proceeding with the following installation.

Note: Installation of this product requires that a section of vent pipe within the attic space of your home or building be removed. For this reason it is recommended that a professional plumber perform installation of this product.

CAUTION: CAST IRON PIPES REQUIRE SPECIAL TOOLS AND SKILLS TO CUT. If you do not have the tools and knowledge to perform the job properly be sure to hire a professional that does!

SIMPLE SOLUTIONS DISTRIBUTING ACCEPTS NO RESPONSIBILITY FOR ANY DAMAGE OR PERSONAL INJURY SUSTAINED BY THE INSTALLER OR TO VENT PIPES OR ANY SURROUNDING BUILDING STRUCTURE OR PROPERTY DURING THE COURSE OF THIS INSTALLATION PROCESS.



Wolverine Brand™ Vent Filters

Installation Instructions For The *Inline Wolverine*


Step 1)

Measure The Inline Wolverine length as they vary slightly from model to model.



Step 2)

Using the measurement from step one, mark the attic vent pipe where the filter is to be installed.

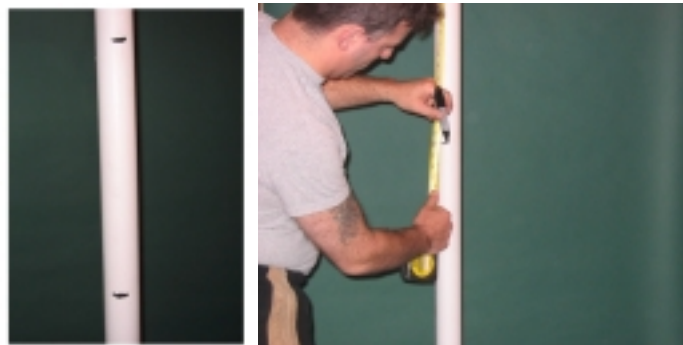

Wolverine Brand™ Vent Filters


Installation Instructions For The *Inline Wolverine*

Step 3)

Cut out the marked section of **PVC/ABS** vent pipe using a handsaw.

CAUTION: DO NOT CUT A CAST IRON PIPE AS IT WILL CRACK! CAST IRON PIPES MUST BE CUT BY A PROFESSIONAL using special tools!!

NOTE: Save the cut section of vent pipe from this step so that it may be reinstalled for when your Inline Wolverine filter needs to be removed for recharging or any other reason.

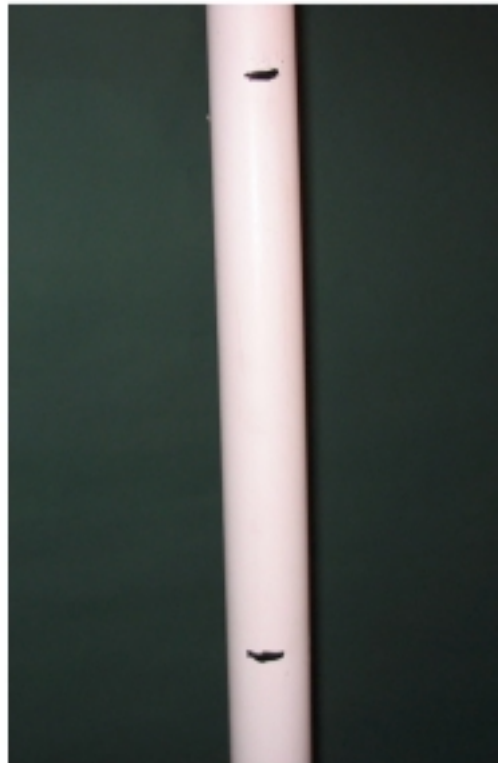


Wolverine Brand™ Vent Filters

Installation Instructions For The *Inline Wolverine*

Step 4)

Install rubber couplings on the upper and lower halves of the vent pipe. Slide the couplings on until a small section of pipe protrudes past the coupler.

Note: Silicone spray will ease the installation of the rubber couplings.

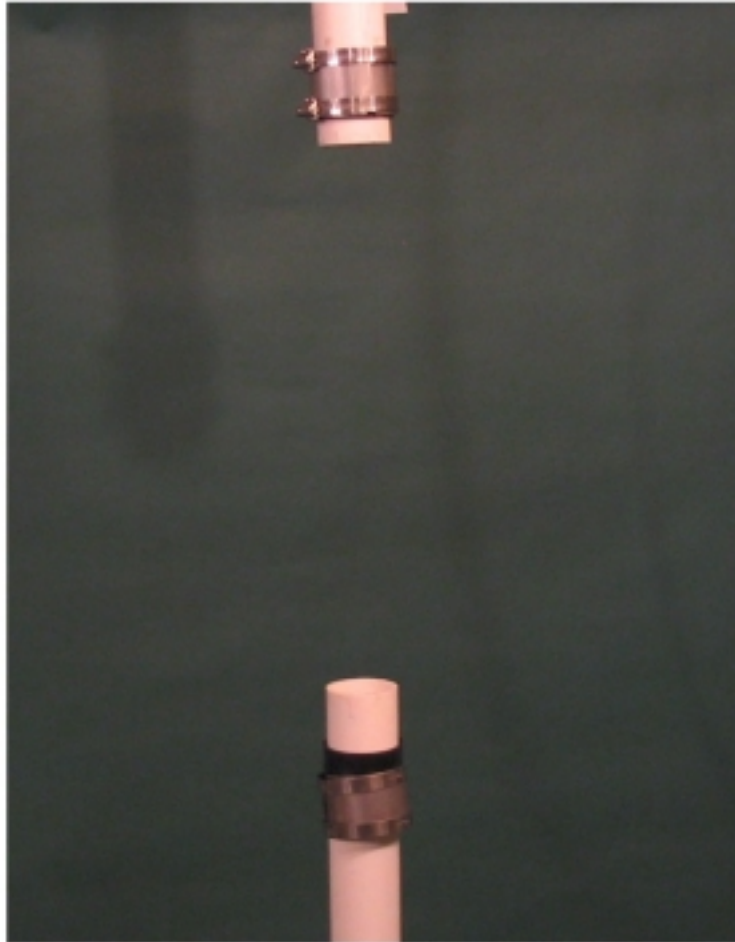

Wolverine Brand™ Vent Filters

Installation Instructions For The *Inline Wolverine*

Step 5)

Install the filter between the cut sections of vent pipe and slide the rubber couplings over the filter ends. If you are installing the unit with the optional saturation indicator, simply remove the pipe plug on the filter and after installing the filter with the plug at the outlet side of the vent (roof side) install the saturation indicator. Use care not to over tighten or damage may result.



Step 6)

Tighten all rubber-coupling clamps on both filter and vent pipe side.



Wolverine Brand™ Vent Filters

Installation Instructions For The *Inline Wolverine*

Step 7)

Install the insulation blanket around the filter and secure it with insulation tape (included in kit). If using the saturation indicator poke a hole in the blanket to the indicator will stick through.



Step 8)

Install the rain cap on the open end of the vent pipe atop the roof.

NOTE: This is essential, as it will protect the filter chamber from water damage due to precipitation. Neglecting to install the included rain cap atop the vent pipe will void your warranty.

